

TR3100AC4P Thermostat Instructions

Buttons and LCD display

Buttons / Icon	Description	Button / Icon	Description
	Turning on/off thermostat		Cool mode
	Heat/Cool mode selection		Heat mode
	Fan speed selection		High fan speed
	Increase the set value		Medium fan speed
	Decrease the set value		Low fan speed
MON	Monday(TUE, Tuesday, etc)		Auto fan speed
SET AT	Set temperature		Fan is running continuously regardless of room temperature



Set the Time and Day

- 1) Press and hold until the time flashes
- 2) Use button or to change the time
- 3) Press button again, the day of the week will flash
- 4) Use button or to change the day
- 5) Press button to accept and exit

Setting temperature

Press up arrow button or down arrow button once, you will see set temperature flashing. Use up arrow button or down arrow button again to adjust to the temperature you want your room to maintain. Press button to accept and exit.

Resetting factory defaults

Your thermostat has the ability to reset all settings to the factory defaults. If you are certain you want to do this:

In standby mode(when thermostat is turned off), press and hold button and for 5 seconds until RES is shown on LCD.

C / F selection

To select C or F temperature, press and hold the buttons and for 5 seconds.

Select fan speed

Press to select between Low, Medium, High or Auto fan speed. In Auto fan speed, the thermostat will automatically switch the fan between high, medium, or low as described below,

Heating: 1°C below = Low, 2°C below = Medium, 3°C below = high
Cooling: 1°C above = Low, 2°C above = Medium, 3°C above = high

Auto fan speed Low fan speed
 Medium fan speed High fan speed

Heat/Cool mode

Press button to select Heat/Cool mode.

Heat: Thermostat controls only the heating system.


Cool: Thermostat controls only the cooling system.

Continuous running fan

To have the fan run continuously regardless of room temperature, press and hold button and for 5 seconds until is shown on LCD. To cancel, repeat above steps.

Installation and Wiring

Carefully separate the front half of the thermostat from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat. Carefully unplug the ribbon connector which is plugged in to the front half of the thermostat. Place the thermostat front half somewhere safe. Terminate the diagrams below. Screw the thermostat back plate on to the back box. Re-connect the thermostat ribbon cable and clip the two halves together.

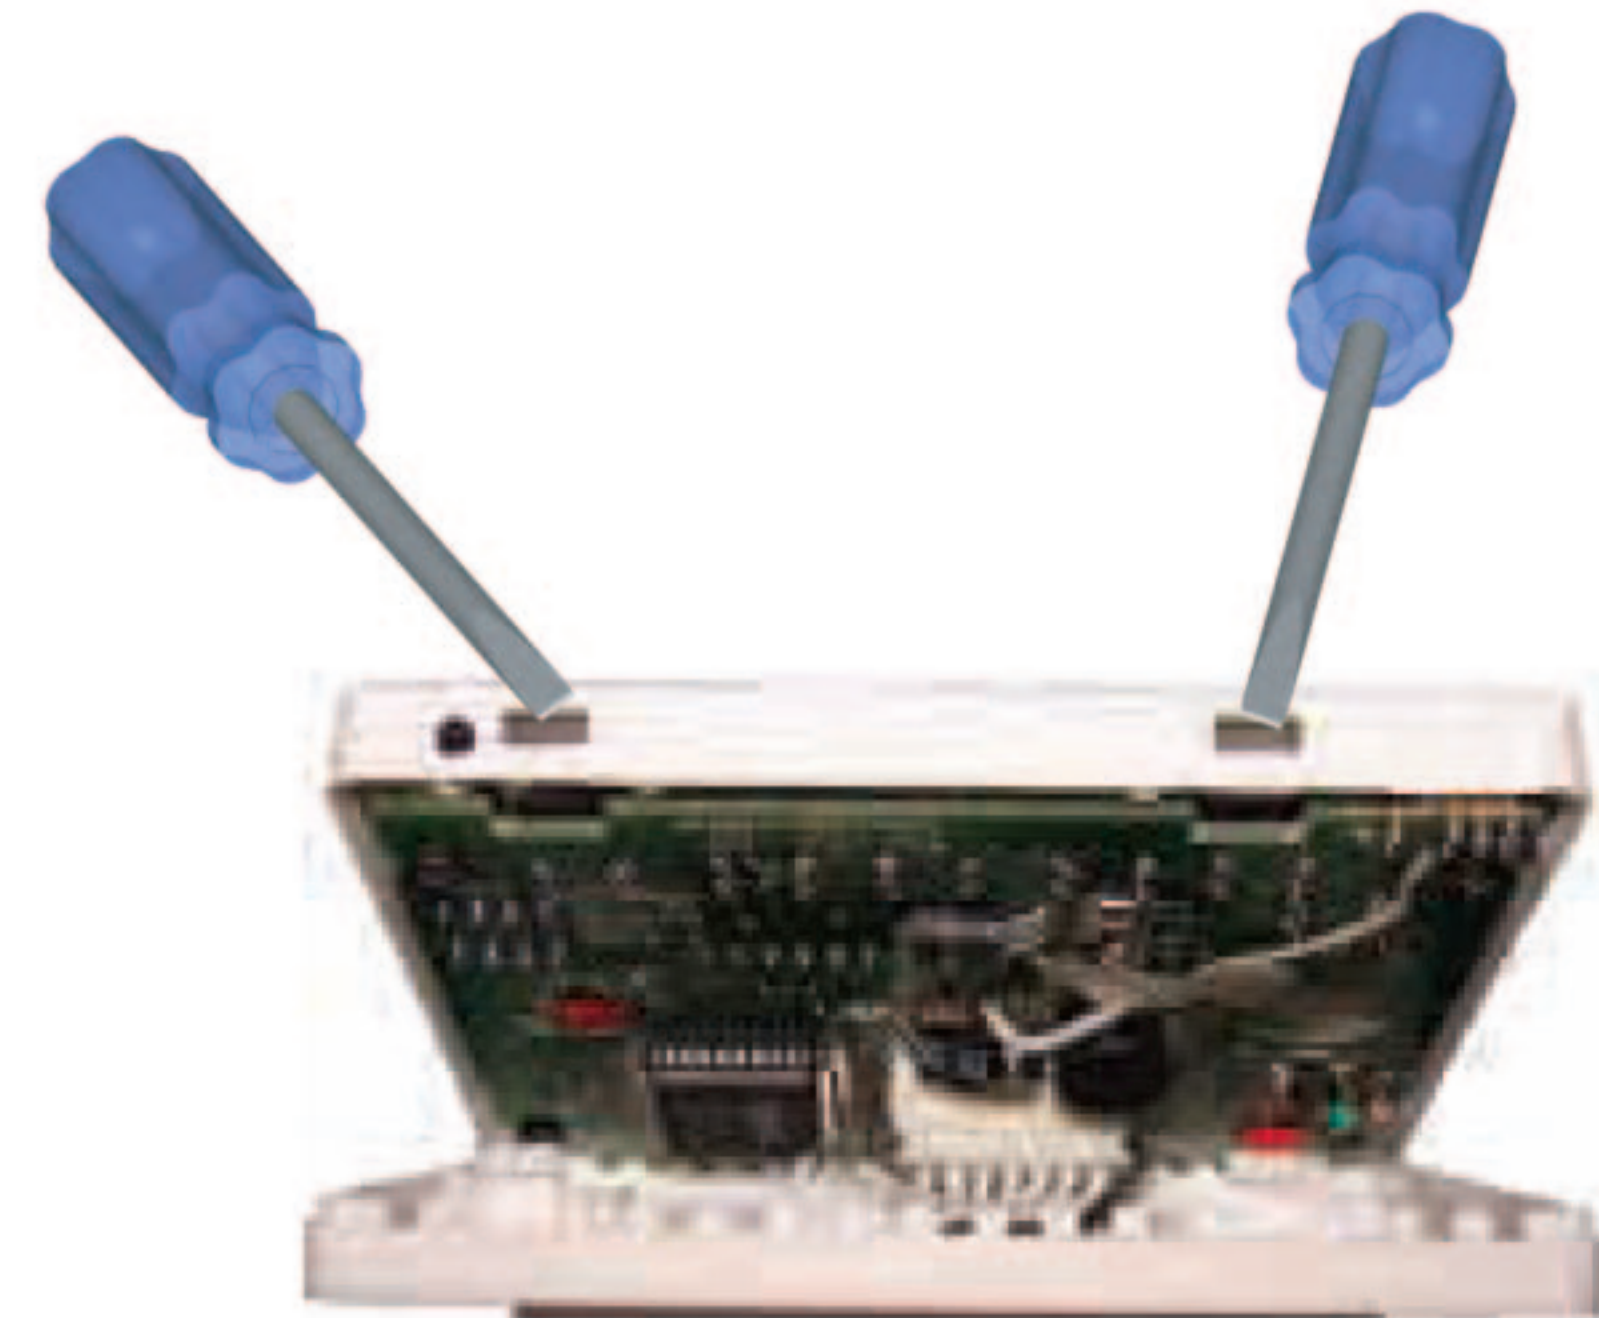

Power supply: 230V AC or 120V AC, see the instruction on relay box.

Max load: 3A for each relay

