


TR3100AC-4Z-WOT

4 zone damper controller user manual

Buttons and LCD display

Buttons / Icon	Description	Button / Icon	Description
	Turning on/off thermostat		Zone selection
	Set time and days;		Zone number
	Turn on the zones		The buttons are locked.
	Turn off the zones		

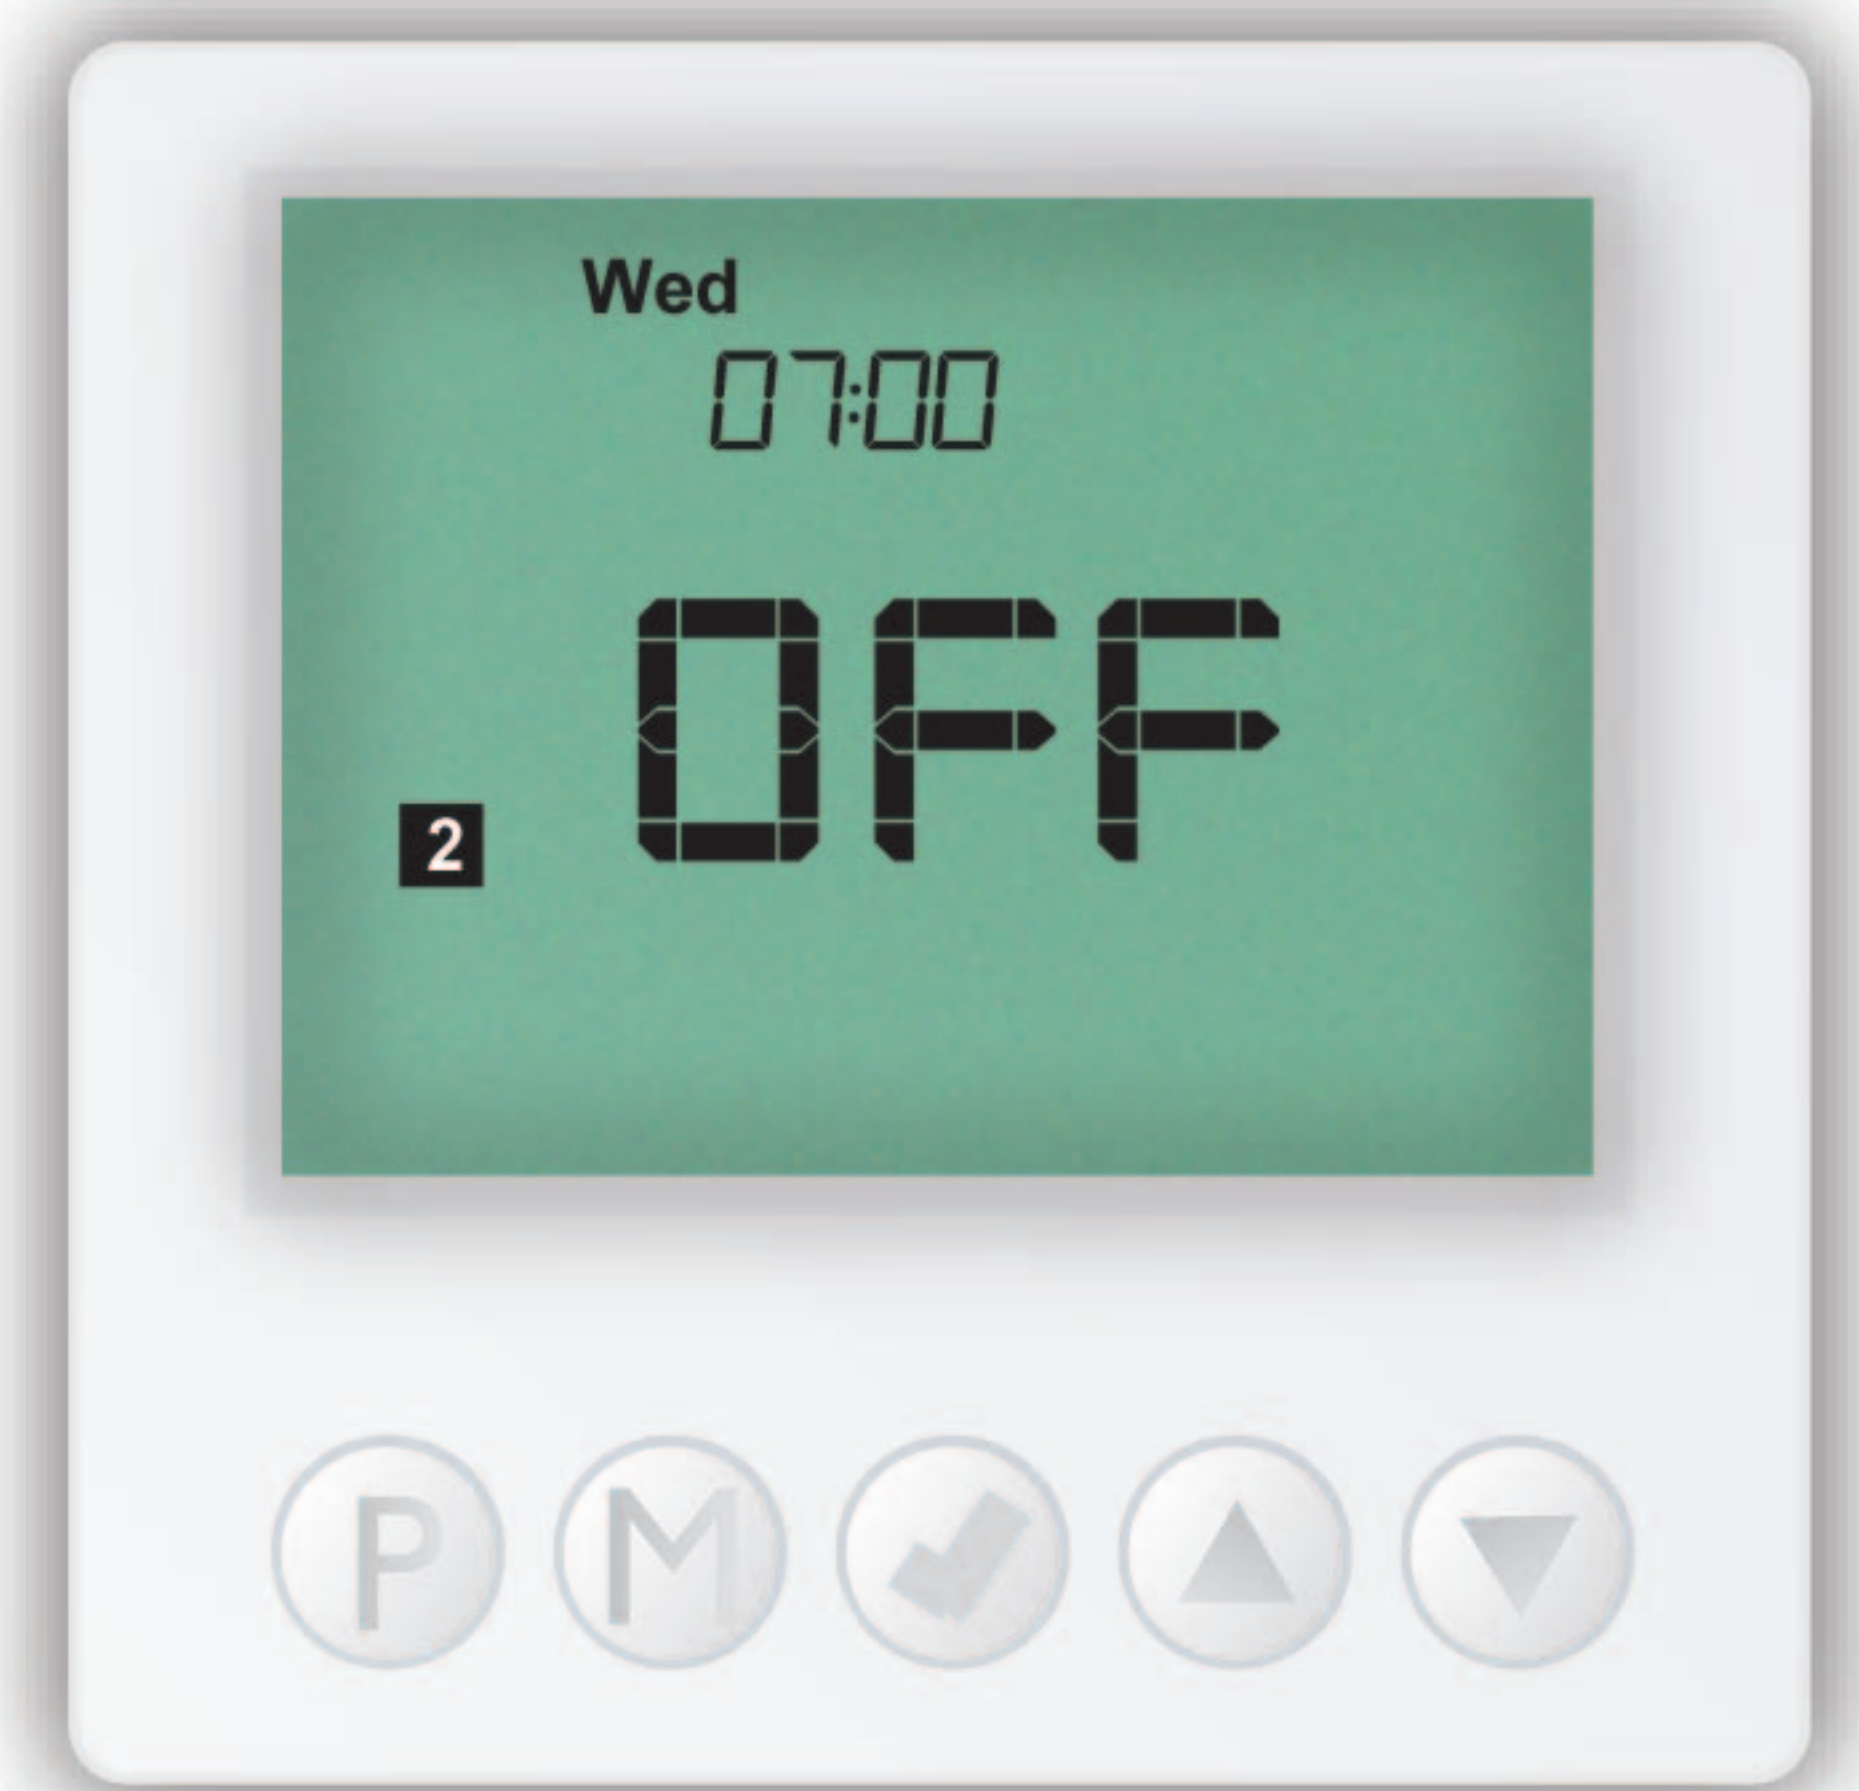

▼ Select zones and turn on/off zones

In order to alternate between 4 zones, you should press and hold button . On LCD, there will be zone number displaying.

Pls. Note: Each zone is working independently. All settings will only be valid for currently selected zones.

The 4 zones are set to be OFF by default. You can turn each zone on by using UP button, and turn them off by using down button.

▼ Set time and days

To set time and days, follow steps below.

Step 1, press and hold button until time display flashes.

Step 2, use buttons or to adjust time.

Step 3, press button again, you will see days display flashing, use up arrow button or down arrow button to set day.

Step 4, press button to accept.

▼ Lock and unlock the buttons


This thermostat is equipped with buttons locking facility to protect it from accidentally pressing.

To lock the buttons, press and hold and simultaneously for 3 seconds until the icon displays, to unlock the buttons, repeat the step above.

▼ Reset to Factory setting

In standby mode (when thermostat is turned off), press and hold button and for 3 seconds to reset the thermostat fully to the configuration it left the factory. There will be a RESET appearing on LCD for 5 seconds and this means the resetting is done.

Wiring Diagram

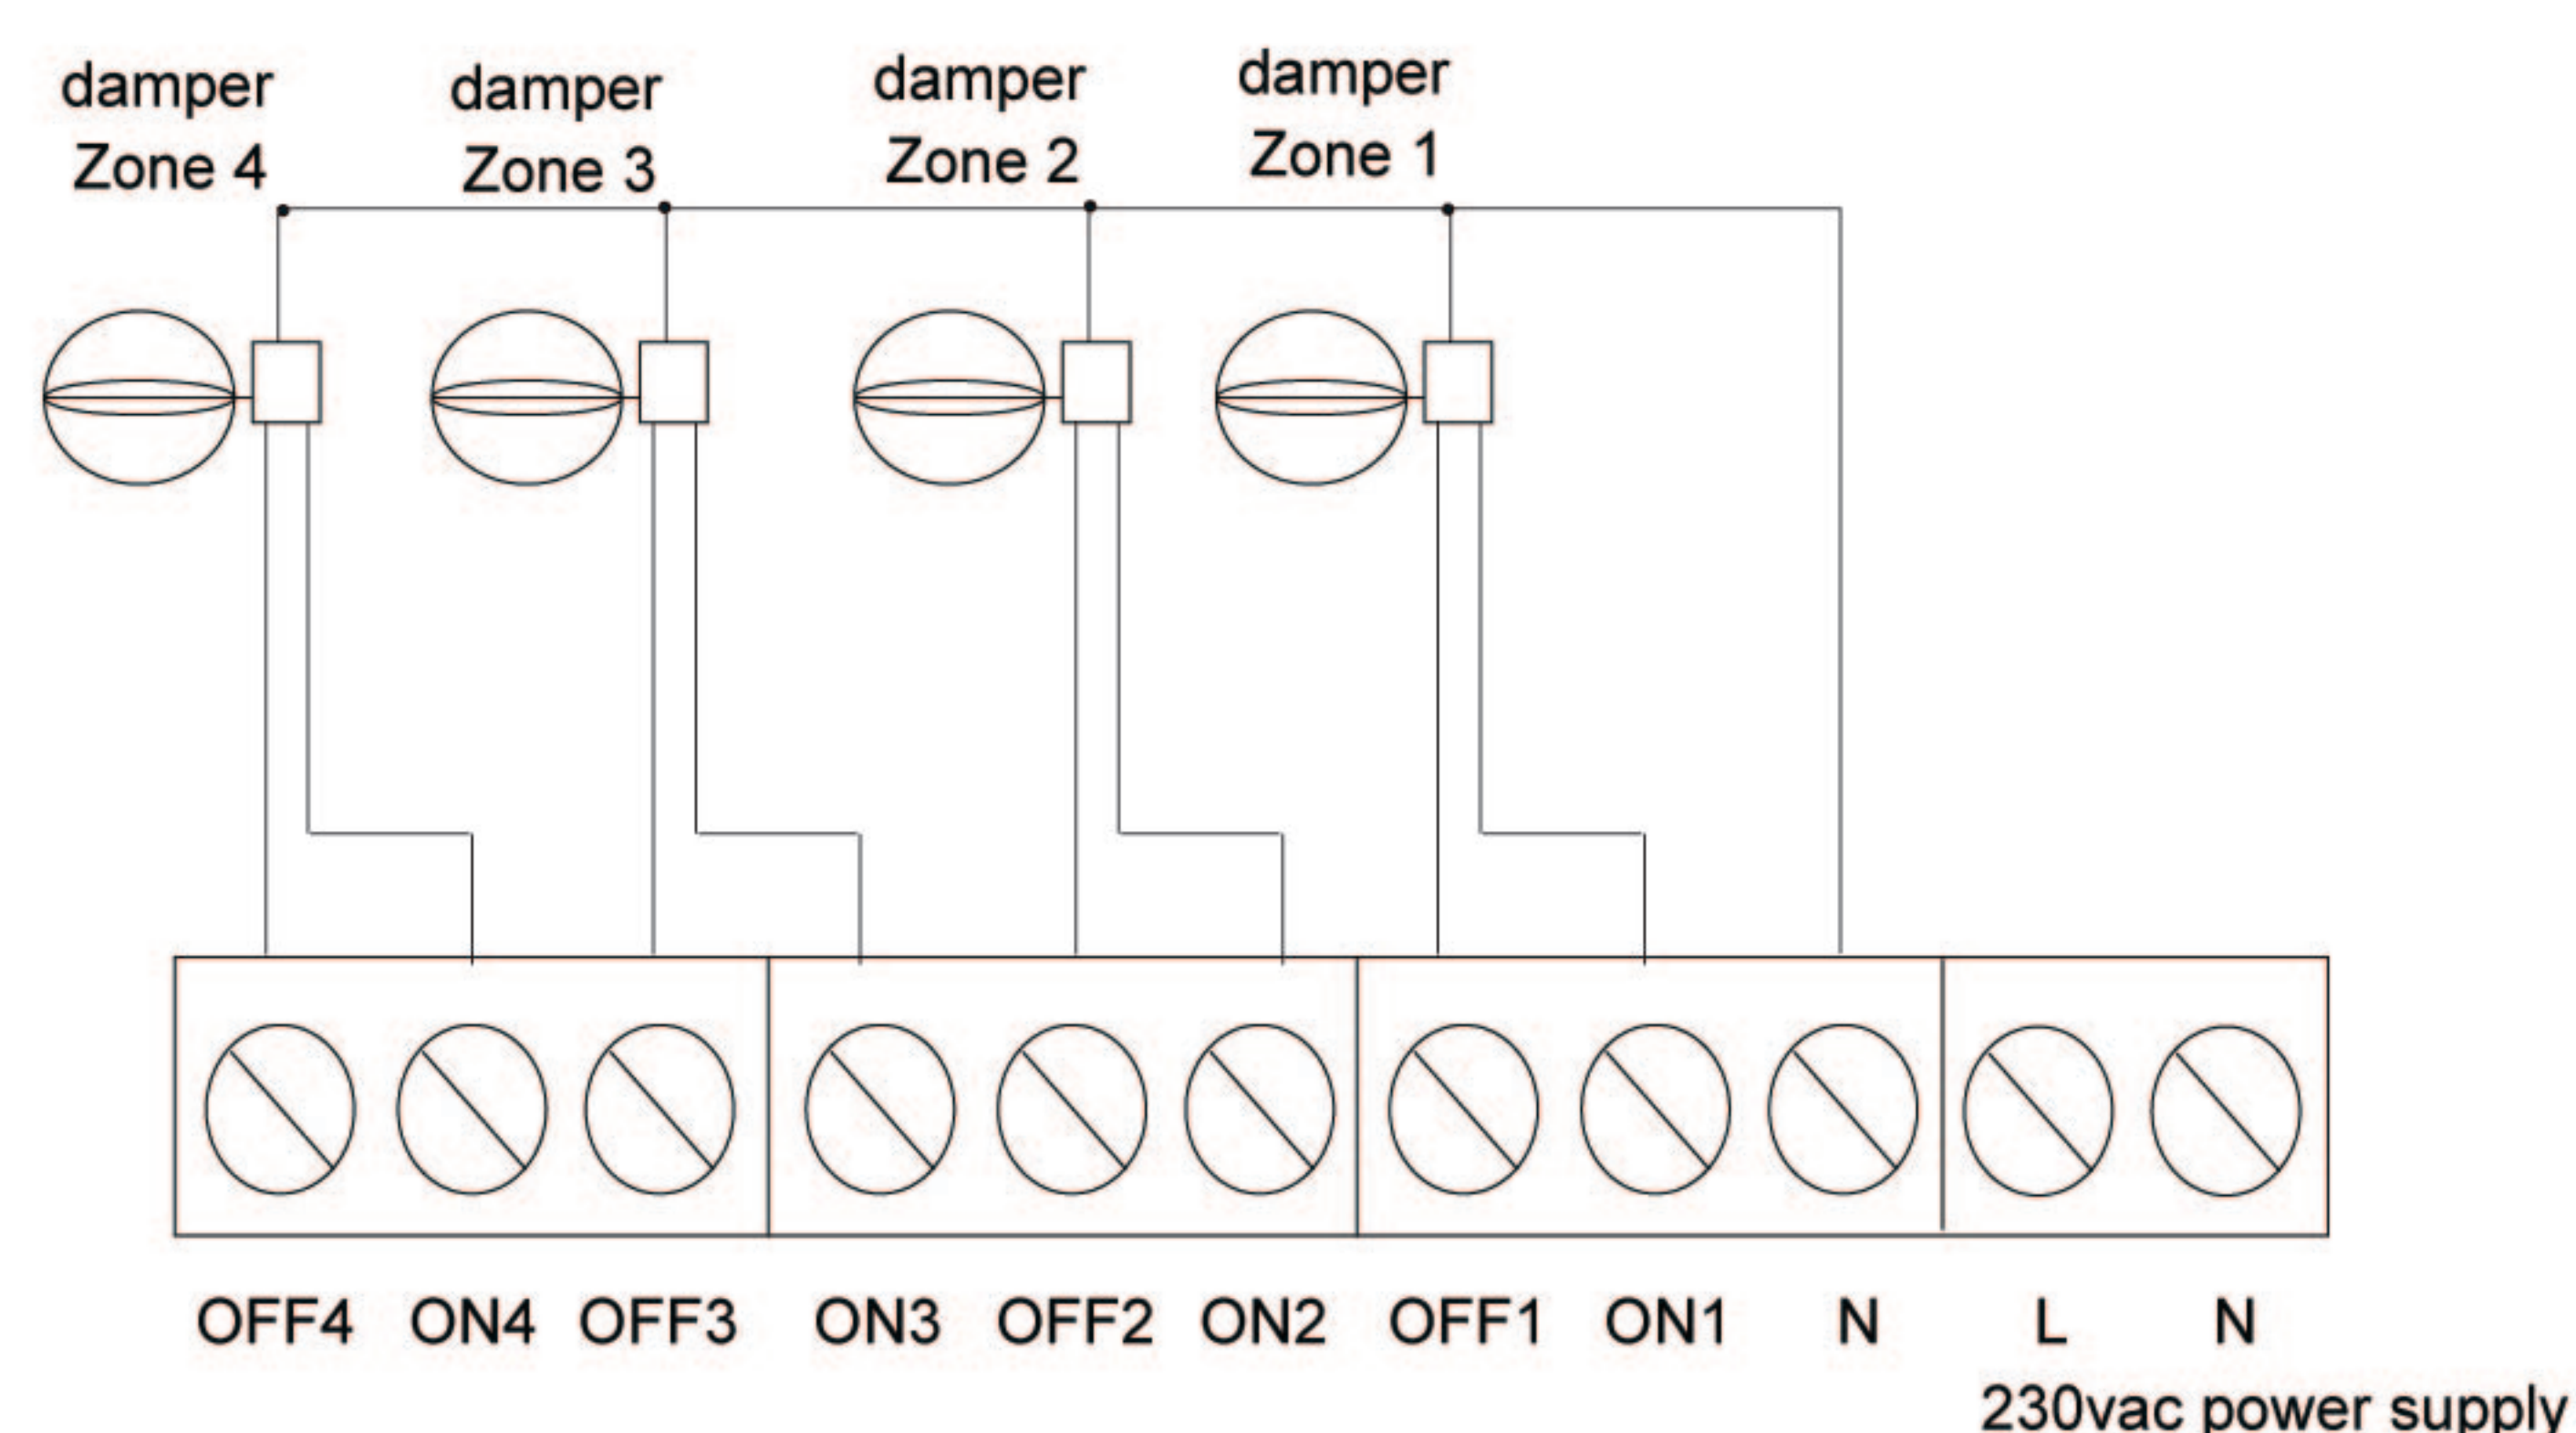

This product should be installed by a qualified electrician.